

JUNKIN SAFETY LIMITED WARRANTY

Junkin Safety Appliance Co warrants their cots to be free from defects in material and workmanship for one year from the date of purchase. This warranty does not apply to cots, which have been abused, misused or modified. If a Junkin Safety cot proves to be defective in material and workmanship within one year after purchase, return it to Junkin Safety with Pre-approved shipping instructions. Please enclose your name, address and phone number with a short description of the problem. Junkin Safety will cover freight and at their option, repair or replace defective parts free of charge. Repairs are warranted as described above for the remainder of the original warranty period. Junkin Safety's sole liability and your exclusive remedy under this warranty is limited to repair of the defective cot. There are no other warranties expressed or implied and Junkin Safety shall not be liable for incidental, consequential or special damages, or any other damages costs or expense of repair or replacement as describer above.

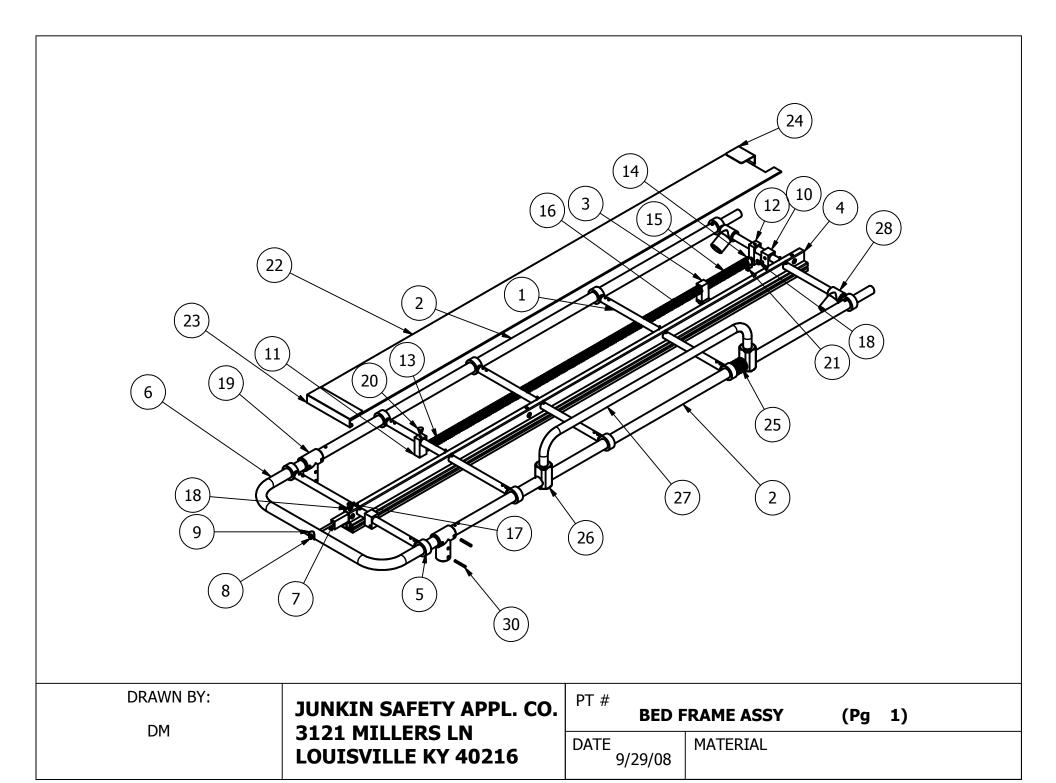

NOTE-WHEN ORDERING PARTS "INDICATE" WIDEBODY, SUBURBAN OR STANDARD SIZE COT

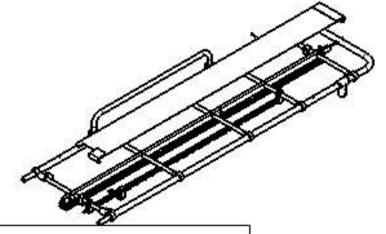

							- BV			
		Parts	List		Parts List					
ITEM	QTY	PART NUMBER	DESCRIPTION	ITEM	QTY	PART NUMBER	DESCRIPTION			
1	5	MC-100-18A	CROSSBAR ASSY	16	1	MC-100-07	COMPRESSION			
2	2	MC-100-52A	SIDERAIL ASSY				SPRING-LONG			
3	1	MC-100-109A	SPRING LOADER ASSY	17	1	MC-100-128	1/4-20 x 7/8 Pan Hd Phillip			
4	1	MC-100-01	CENTER EXTRUSION RAIL	18	2	1/4" Star Washer	1/4" External Washer			
5	10	MC-100-03	CASTING-WITH TANG	19	2	MC-100-47	T-CASTING-POST			
6	1	MC-100-16	SWIVEL END TUBE	20	1	MC-100-132	# 84 Pop Rivet Steel/Steel			
7	1	MC-100-117	MAIN RAIL TIE BAR	21	1	MC-100-133	1/4-20 x 1/2 Pan Hd Self			
8	1	MC-100-143	1/4-20 x 3-1/4 Hex Hd				Tapping Phillips Machine			
925		de	Machine Screw				Screw			
9	1	MC-100-107	1/4" Foot Stop Wave	22	1	MC-100-43	Aluminum Decking			
92			Washer	23	1	MC-100-51-Long	Panel End Cap-Long			
10	2	MC-100-25	HANGER STOP	24	1	MC-100-51-Short	Panel End Cap-Short			
11	1	MC-100-29	RETURN SPRING	25	1	MCSR-02	Pivot Block Spring			
12.1			SUPPORT-SWIVEL END	26	2	MCSR-01	PIVOT BLOCK			
12	1	MC-100-29-A	RETURN SPRING	27	1	MCSR-03	SIDE ARM			
		Section of the Control of the Control	SUPPORT-FOOT END	28	2	MC-100-04	Rigid Leg T-Casting			
13	1	MC-100-30	SPRING GUIDE ROD	30	2	MC-100-135	3/16 X 1-1/2 ROLL PIN			
14	1	MC-100-89	.437 STOP COLLAR	٠,						
15	1	MC-100-10	COMPRESSION							
2		44	SPRING-SHORT	25						


DRAWN BY:

JUNKIN SAFETY APPL. CO. 3121 MILLERS LN LOUISVILLE KY 40216 PT # BED FRAME ASSY

(Pg 2)

DATE 9/29/08 MATERIAL

DM

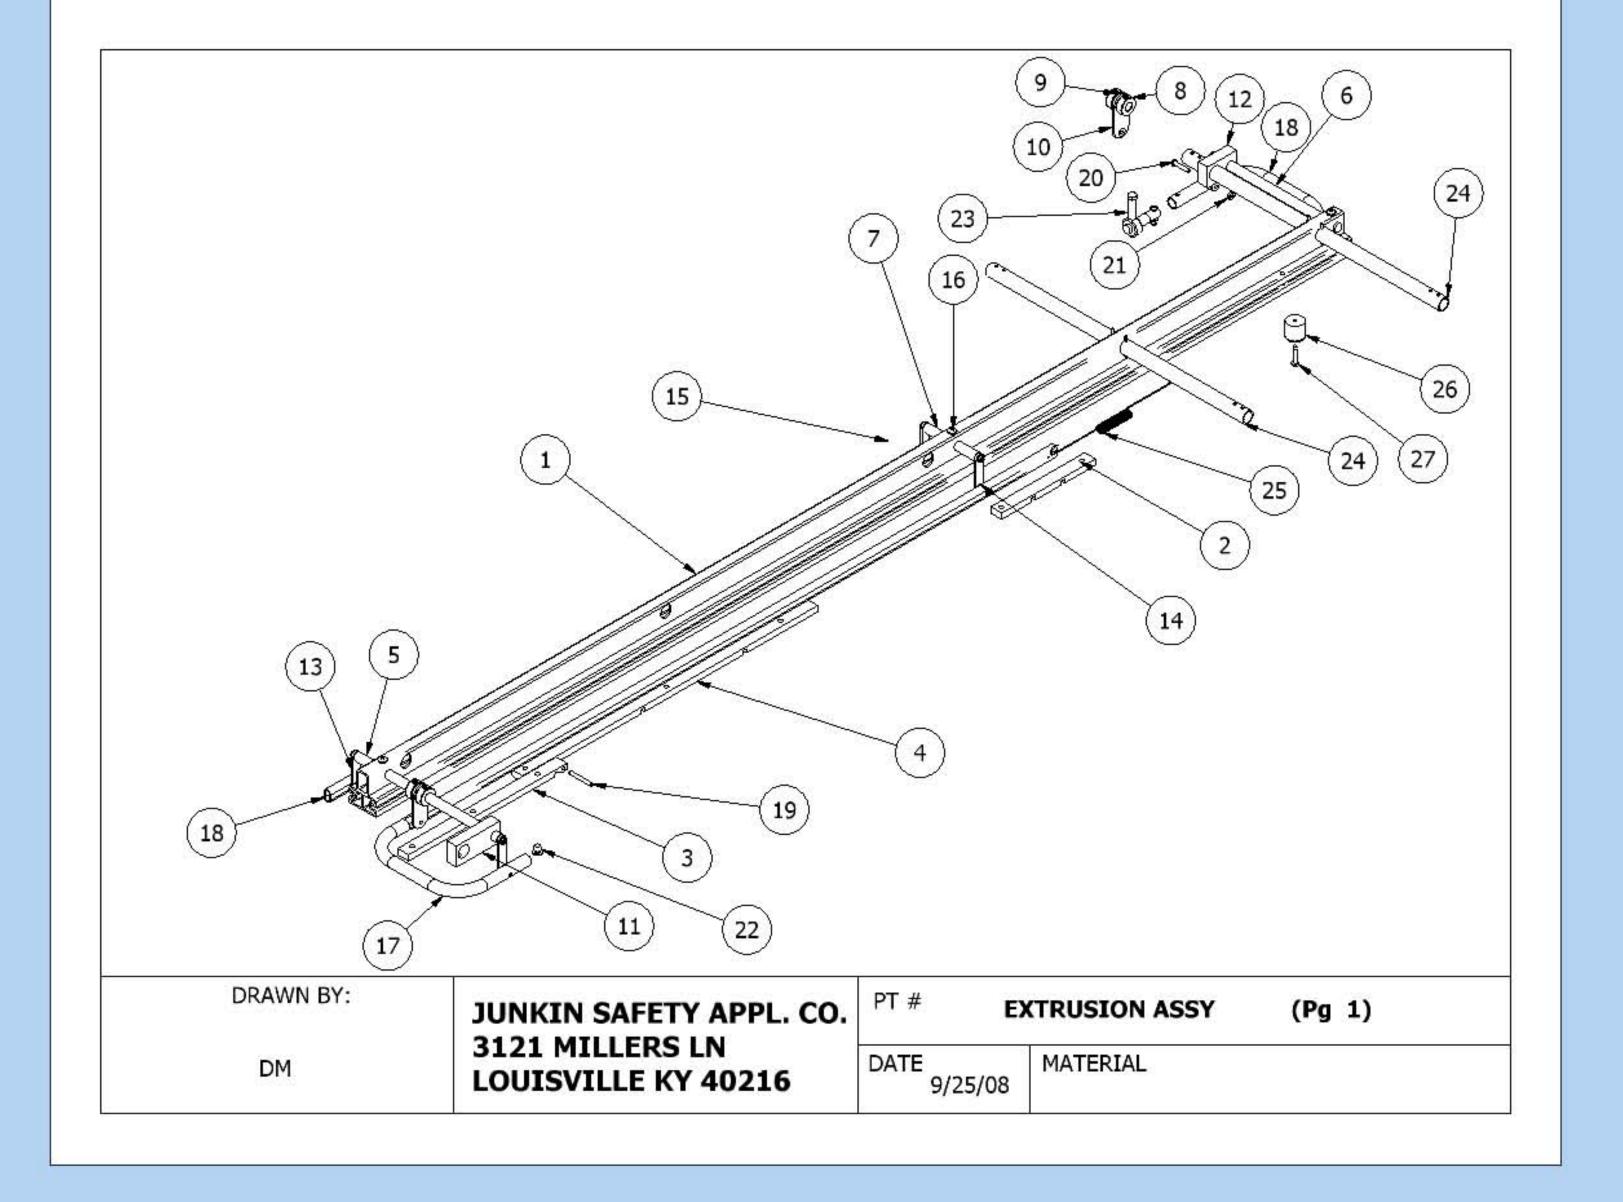

NOTE-WHEN ORDERING PARTS "INDICATE" SUBURBAN, WIDEBODY OR STANDARD SIZE COT

	Parts List					Parts List				
ITEM	QTY	PART NUMB	DESCRIPTION	ITEM	QTY	PART NUMB	DESCRIPTION			
1	1	MC-100-01	EXTRUSION1	15	5	MC-100-84	10-24 Shoulder Bolt			
2	1	MC-100-23	LOCKING STRIP-SHORT	16	3	MC-100-118	1/4-20 x 3/4 Phillips Hd			
3	1	MC-100-22	LOCKING STRIP-MEDIUM				Machine Screw			
4	1	MC-100-21	LOCKING STRIP-LONG	17	1	MC-100-39	CONTROL HANDLE-SHORT			
5	1	MC-100-26	HANGER ROD-9-3/4	18	1	MC-100-38	CONTROL HANDLE-LONG			
6	1	MC-100-27	HANGER ROD-8-1/4	19	1	MC-100-135	3/16 x 1-1/2 Roll Pin			
7	1	MC-100-28	HANGER ROD-3-1/2	20	1	MC-100-130	10-24 x 1 Socket Button Hd			
8	4	MC-100-112	1/2" Shaft Collar				Machine Screw			
9	4	MC-100-82	NYLON WASHER-1/2 IN	21	1	MC-100-131	10-24 Nylon Lock Nut			
10	2	MC-100-15	HANGER-1 INCH	22	1	MC-100-132	# 84 Steel/Steel Pop Rivet			
11	1	MC-100-48	HANGER ROD	23	1	MC-100-95A	CONTROL HANDLE STOP			
			SUPPORT-LONG			54.54.55.	ASSY			
12	1	MC-100-49	HANGER ROD	24	2	MC-100-18A	CROSSBAR ASSY			
*******			SUPPORT-SHORT	25	2	MC-100-46	CONTROL HANDLE			
13	5	MC-100-24	HANGER NARROW	- 22-24-2-			RETURN SPRING			
14	7	MC-100-70	NYLON WASHER-3/16	26	1	MC-100-69	Rubber Bumper			
			*	27	1	MC-100-137	10-24 X 1" Pan HD Type F Screw			

DRAWN BY:


DM

JUNKIN SAFETY APPL. CO. 3121 MILLERS LN LOUISVILLE KY 40216

PT # EXTRUSION ASSY (Pg 2)

DATE_{9/25/08}

MATERIAL

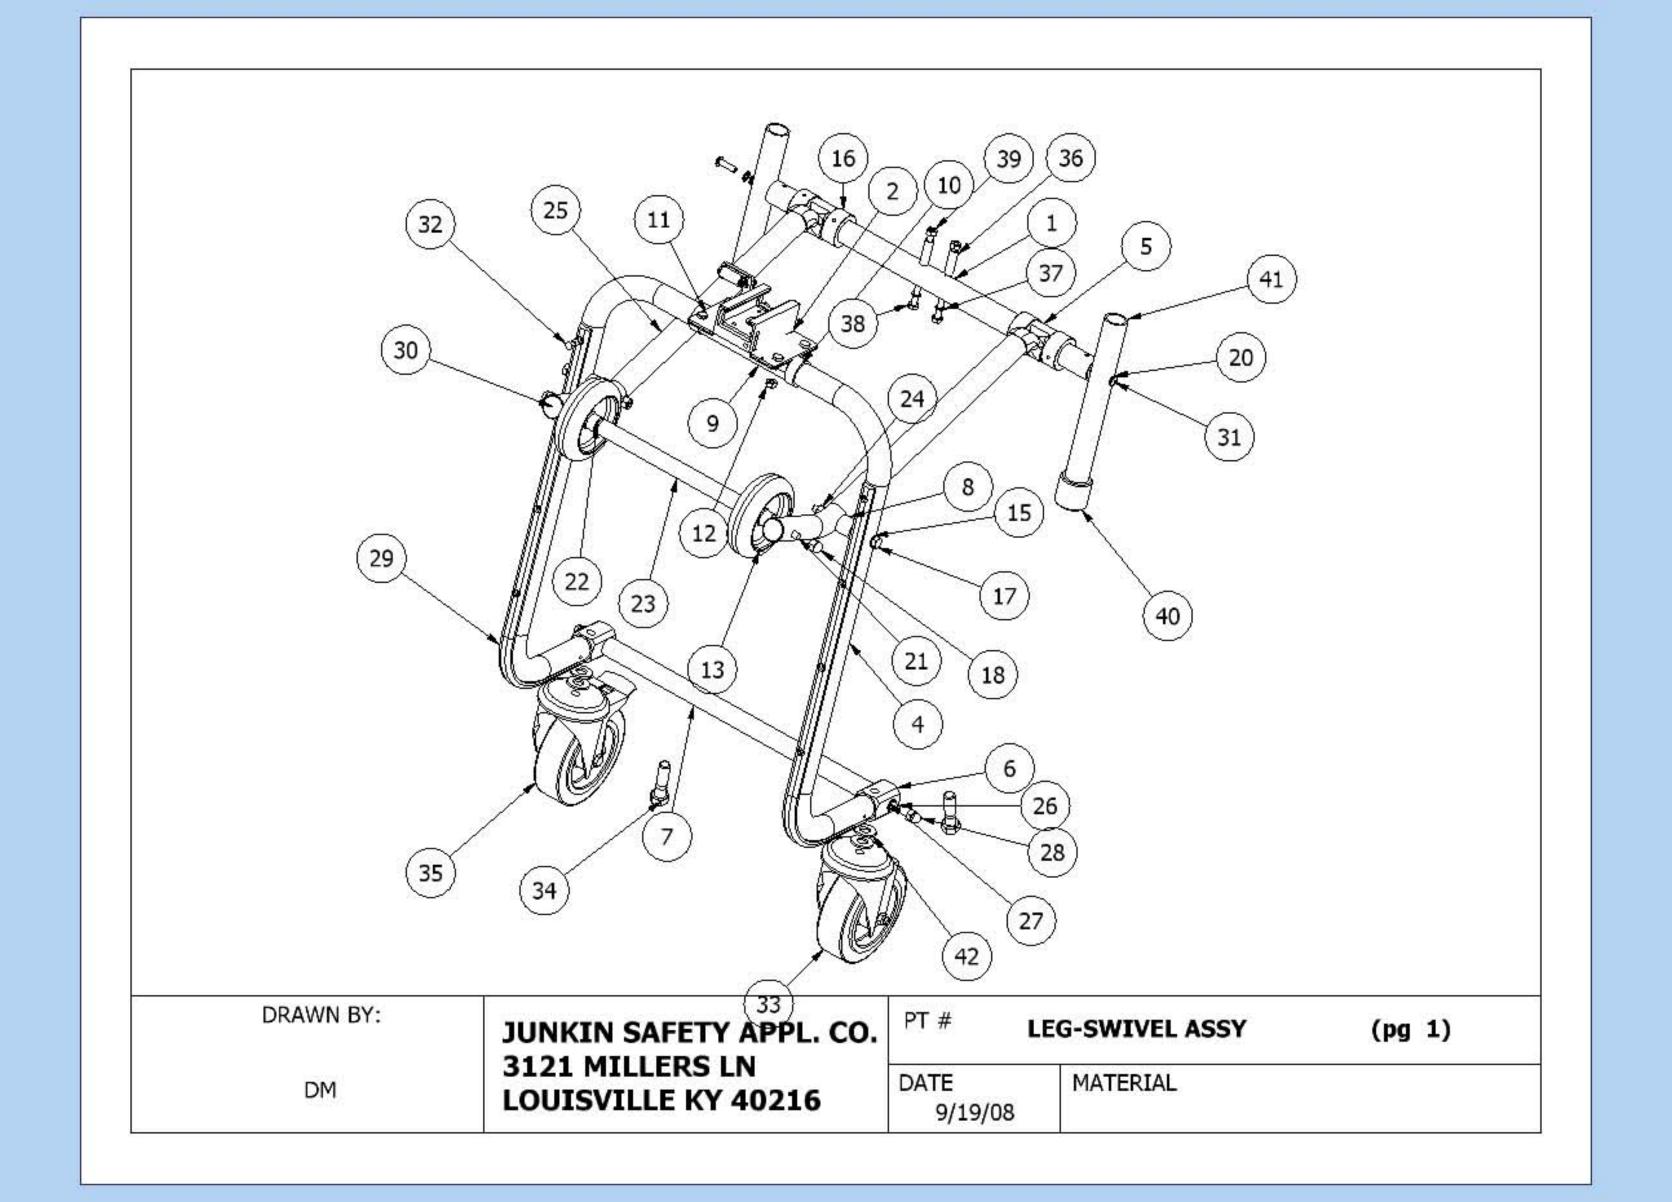


	Parts List			1	Parts List			
	ITEM	QTY	PART NUMBER	DESCRIPTION	ITEM	QTY	PART NUMBER	DESCRIPTION
	1	1	MC-100-96A	LOWER CROSSBAR ASSY	23	1	MC-100-98	LOADER WHEEL
	2	1	SLIDE ASSY					CROSSTUBE-4 IN
	4	1	MC-100-19A *	LEG-SWIVEL-SEE BELOW	24	2	MC-100-104	5/16-18 Nylon Locking Hex
	5	2	JSA-604-13	LARGE OFFSET CASTING	20			Nut
	6	2	MC-100-06	WHEEL BASE	25	2	MC-100-20	LEG SUPPORT-SWIVEL END
	7	1	MC-100-54	LOWER CROSSBAR-SWIVEL	26	1	MC-100-114	ALL-THREAD LOWER CROSSBAR-SWIVEL END
	8	2	MC-100-58	SPACER-NYLON	27	2	Star Washer	5/16 Star Washer
	9	1	MC-100-05	U-PLATE	28	2	MC-100-68	5/16-18 Acorn Nut
	10	2	MC-100-37	RING	29	2	MC-100-11B	BUMPER STRIP -LONG
	11	4	MC-100-119	1/4-20 X 1/2 Hex Cap Screv	v 30	2	MC-100-83	CAP PLUG
	12	4	MC-100-103	Nylon Locking Hex Nut	31	2	MC-100-118	1/4-20 X 7/8 Phillips Pan Ho
	13	2	MC-100-80	LOADER WHEEL-4 INCH			.,	Machine Screw
	14	2	MC-100-81	LOAER WHEEL BUSHING 4	32	10	MC-100-126	#66 Alum/Steel Pop Rivet
				IN	33	1	MC-100-40	5" Swivel Wheel
	15	10	MC-100-100	.312 Flat Washer	34	2	MC-100-127	1/2-13 X 2 INCH
	16	4	JSA-602-5	Collar Casting	35	1	MC-100-41	5" Swivel Locking Wheel
	17	2	MC-100-113	5/16 X 3-1/2 Hex Hd	36	2	MC-100-91	LOWER CROSSBAR
				Machine Screw			, s	STANDOFF-SWIVEL END
	18	3	MC-100-68	5/16-18 Acorn Nut	37	2	MC-100-129	.250 WASHER
	20	2	STAR WASHER	1/4 Inch Star Washer	38	2	MC-100-102	1/4-20 x 3-3/4 Hex Hd
	21	1	MC-100-97	ALL-THREAD 4 IN LOADER				Machine Screw
	25		<i>(2)</i>	WHEEL	39	2	MC-100-103	1/4 Nylon Lock Nut
	22	2	MC-100-36	BUSHING	40	2	MC-100-45A	LEG POST ASSY
NOTE WHEN	ODD	DIA	IC DADTE "TI	NDICATE" OVEDSTA	40	2	MC-100-63	LEG POST TIP-NYLON
				NDICATE" OVERSIZE	41	2	MC-100-45A	LEG POST ASSY
SUBUR	BAN	OR I	REGULAR SI	ZE COT	42	4	MC-100-139	1/2" FLAT SAE WASHER
* LEG SWIVEL	ASSY I	NCLU		LOWER CROSSBAR, MC-100-				
DRAW	DRAWN BY:		JUNKIN S	SAFETY APPL. CO.	Γ#	0050-58008	-SWIVEL ASSY	(pg 2)
DM			3121 MILLERS LN LOUISVILLE KY 40216		3	MATERIAL		

3. Remove the slide item # 1 from the main rail by pulling it down the main rail all the way till it is disconnected from the cot.

NOTE-WHEN ORDERING PARTS "INDICATE" WIDEBODY, SUBURBAN OR

STANDARD SIZE COT

		Parts Lis	st
ITEM	QTY	PART NUMBER	DESCRIPTION
1	1	MC-100-02A-LOAD END *	Slide Assy-Loading End
2	2	MC-100-42 (002309)	WHEEL- 5 INCH RUBBER
3	1	MC-100-31A **	RIGID LEG ASSY - SEE BELOW
4	2	MC-100-08	RIGID WHEEL CASTING
6	2	MC-100-37	RING
8	8	MC-100-100	5/16 X .316 X .062 Flat Washer
9	2	JSA-604-13	LARGE OFFSET CASTING
10	1	MC-100-55	LOWER CROSSBAR TUBE-RIGID END
11	2	MC-100-125	5/16-18 X 3 Hex Hd Machine Screw
12	4	MC-100-104	Hex Nut -Nylon Locking
13	2	MC-100-88	5/16-18 X 2-3/4 Hex Hd Machine Screw
14	2	MC-100-11A	BUMPER STRIP-SHORT
15	8	MC-100-126	#64 Alum/Steel Pop Rivet
16	2	MC-100-32	LEG SUPPORT-RIGID END
17	1	MC-100-105A	LEG SUPPORT CROSSBAR ASSY

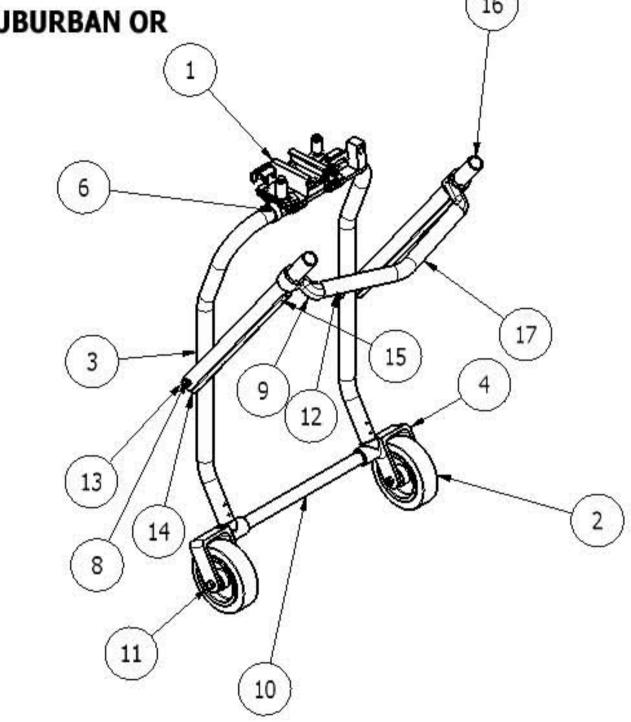

*MC-100-02A INCLUDES-MC-100-02

-MC-100-02 SLIDE MC-100-12 BASEPLATE


MC-100-09A LEVER ASSY(2/EA)

MC-100-75 SLIDE PIN

MC-100-110 BASEPLATE HEX NUT

** MC-100-31A INCLUDES - MC-100-31 LEG

MC-100-08 WHEEL HOUSINGS(Wheels not included)
MC0100-11A BUMPER STRIPS

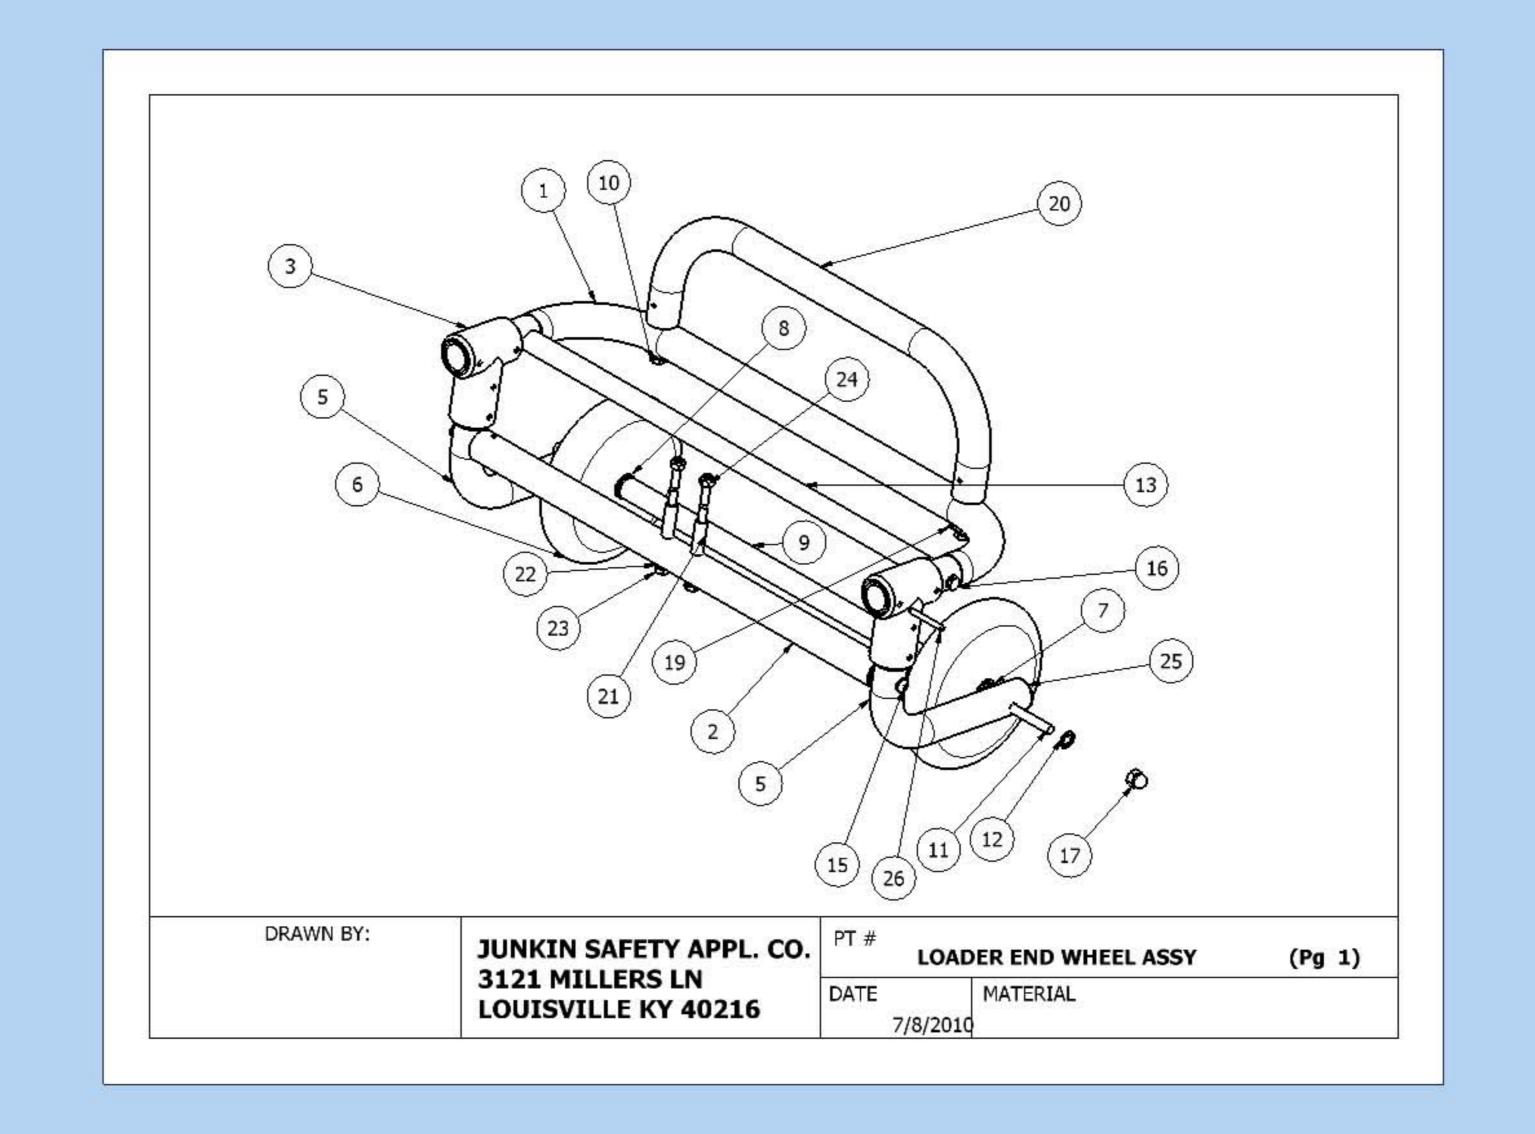


NOTE-WHEN ORDERING PARTS"INDICATE" WIDEBODY, SUBURBAN OR STANDARD SIZE COT



		Parts L	ist	Parts List					
ITEM	QTY	PART NUMBER	DESCRIPTION	ITEM	QTY	PART NUMBER	DESCRIPTION		
1	1	MC-100-59(A) *	RIGID END TUBE	15	2	MC-100-118	ALUMINUM REDUCER		
2	1	MC-100-96A	LOWER CROSSBAR ASSY				SCREW		
3	2	MC-100-47	T-POST CASTING	16	2	MC-100-116	1/4-20 X 1-3/4 HEX HD CAP		
5	1	MC-100-53	WHEEL	ii.			SCREW		
			POST-SET(Left/Right)	17	2	MC-100-68	ACRON NUT 5/16-18		
6	2	MC-100-78	6 INCH LOADER WHEEL	19	2	MC-100-107	1/4 INCH WAVE WASHER		
7	4	MC-100-100	5/16 X .062 FLAT WASHER	20	1	MC-100-44A	FOOT STOP ASSY		
8	2	MC-100-36	BUSHING	21	2	MC-100-92	LOWER CROSSBAR		
9	1	MC-100-101	LOADER WHEEL CROSS				STANDOFF-RIGID END		
			TUBE	22	2	MC-100-129	1/4" X .062 Thick Washer		
10	2	MC-100-141	1/4-20 X 1 HEX Hd Machine	23	2	MC-100-102	1/4-20 X 3-3/4 Hex Hd Cap		
			Screw			,	Screw		
11	1	MC-100-57	ALL-THREAD-6 IN LOADER	24	2	MC-100-103	1/4-20 NYLON LOCK NUT		
			WHEEL	25	1	MC-100-83	CAP PLUG		
12	2	5/16 STAR WASHER	5/16 INTERNAL TOOTH	26	8	MC-100-135	3/16 X 1-1/2 ROLL PIN		
13	1	MC-100-99	CROSSBAR-END			1			

* NOTE: PT# MC-100-59A IS THE ENTIRE ASSEMBLY

DRAWN BY:	3121 MILLERS LN	PT # LOAD	(Pg 2)
DM		DATE 7/8/2010	MATERIAL

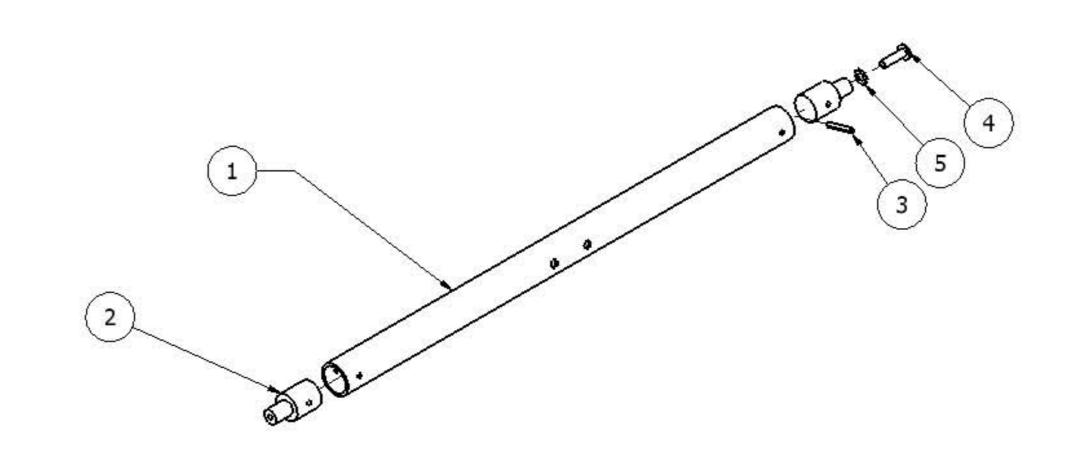

NOTE-WHEN ORDERING PARTS "INDICATE" WIDEBODY, SUBURBAN OR STANDARD SIZE COT

	Parts List					
ITEM	QTY	PART NUMBER	DESCRIPTION			
1	1	MC-100-96A *	LOWER CROSSBAR			
2	2	MC-100-33-500	REDUCER-ALUMINUM500			
3	2	MC-100-138	Pin - Slotted Spring			
4	2	MC-100-118	1/4-20 X 7/8 PHILLIPS D			
5	2	1/4 INCH STAR WASHER	External Tooth Washer			


*NOTE: PT# MC-100-96A INCLUDES ITEMS # 1,2,& 3

DRAWN BY:

DM

JUNKIN SAFETY APPL. CO. 3121 MILLERS LN LOUISVILLE KY 40216


DATE 57/23/2007 MC-100-96A LOWER CROSSBAR ASSY

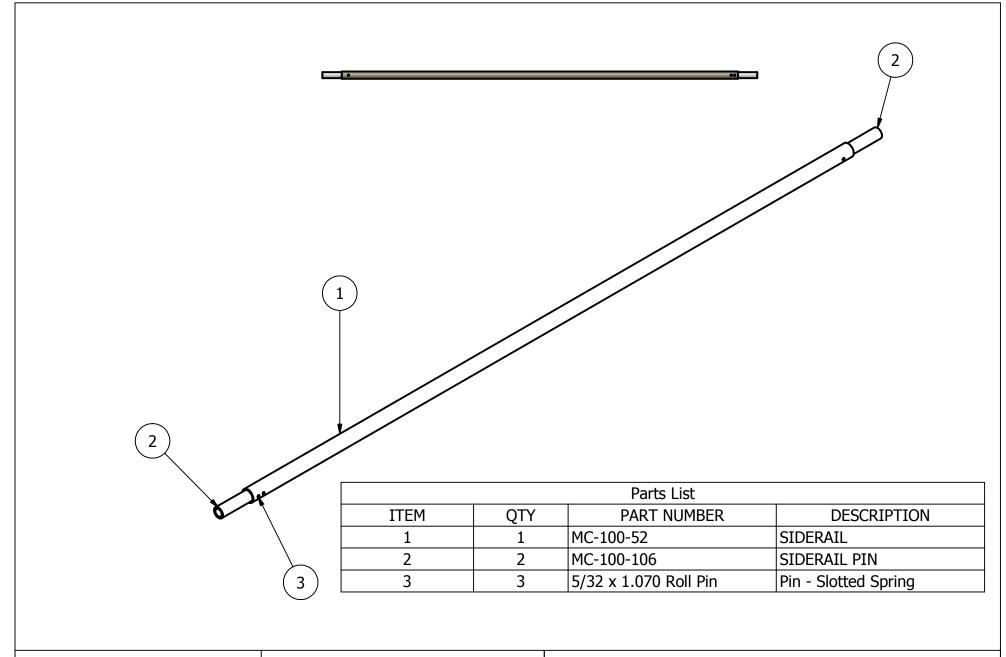

DRAWN BY:


DM

PT #	SIDERAIL ASSY
DATE 10/08/08	MATERIAL

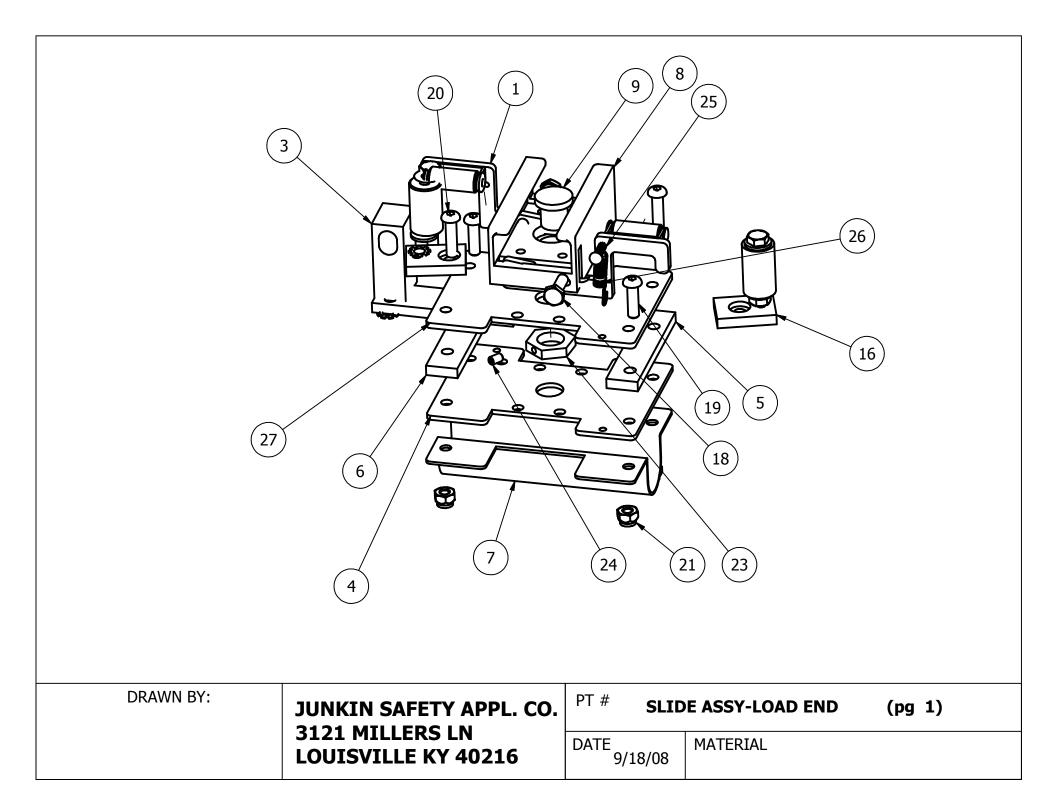


	Parts List					Parts List				
ITE	QTY	PART NUMBER	DESCRIPTION	ITE	QTY	PART NUMBER	DESCRIPTION			
1	2	MC-100-09A	LEVER ASSY	16	1	MC-100-60A	Control Handle Guide Assy			
3	1	MC-100-109A	SPRING LOADER PLATE ASSY	18	2	MC-100-121	1/4-20 X 5/8 Socket Hd Machine Screw			
4	1	MC-100-12	BASEPLATE	19	3	MC-100-122	1/4-20 X 7/8 Socket Hd			
5	1	MC-100-76	BASEPLATE				Machine Screw			
			STANDOFF-LONG	20	2	MC-100-123	1/4-20 X 1" Socket Hd			
6	1	MC-100-77	0-77 BASEPLATE		36		Machine Screw			
			STANDOFF-SHORT	21	5	MC-100-103	1/4-20 Nylon Lock Nut			
7	1	MC-100-05	U-PLATE	23	1	MC-100-110	Baseplate Hex Nut			
8	1	MC-100-02* (A-L)	SLIDE	24	1	MC-100-124	10-24 x 1/4 Socket Set			
9	1	MC-100-75	SLIDE PIN				Screw			
11	1	MC-100-67	NYLON GUIDE ROLLER	25	1	MC-100-79	Drive Screw			
				27	1	MC-100-12-10GA	BASEPLATE			

*NOTE: MC-100-02A-L IS THE SLIDE ASSEMBLY COMPLETE

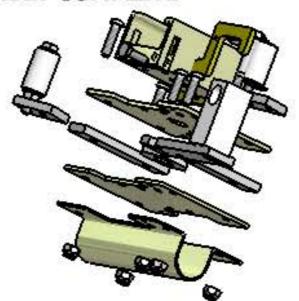


DRAWN BY:	JUNKIN SAFETY APPL. CO. 3121 MILLERS LN LOUISVILLE KY 40216	PT # SLII	(pg 2)
3		DATE 9/18/08	MATERIAL

SLIDE ASSY-NON LOADING END

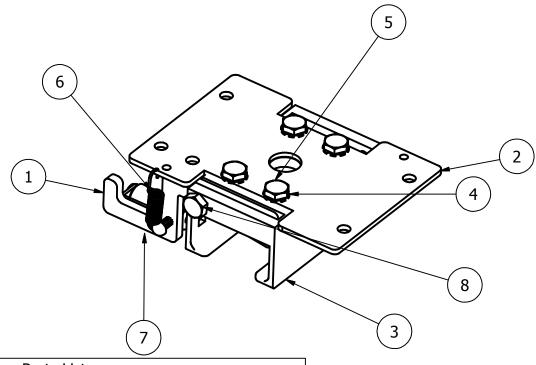

	Parts List						
ITEM	QTY	PART NUMBER	DESCRIPTION				
1	1	MC-100-09A	LEVER ASSY				
2	1	MC-100-12	BASEPLATE				
3	1	MC-100-02	SLIDE1				
4	4	MC-100-120	1/4" Split Lock Washer				
5	4	MC-100-119	Base Plate Bolts 1/4-20 X				
			1/2 Long				
6	1	MC-100-13	SPRING-LEVER				
7	1	MC-100-79	#8 X 5/8 Drive Screw				
8	1	MC-100-121	Lever Screw Hex Hd.				
			1/4-20 X 5/8 Long				


5/20/05

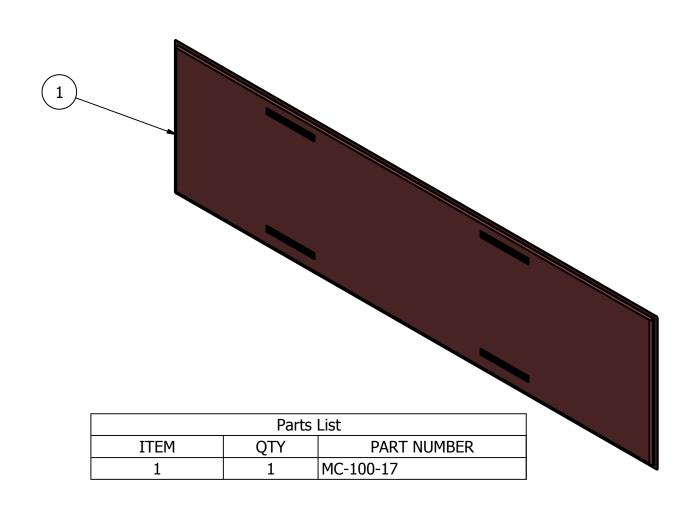

FOR WIDEBODY COT ORDER PT# MC-100-17WB


DRAWN BY: JUNKIN SA

PT # MC·	-100-17 COT PAD
DATE 2/9/2010	MATERIAL

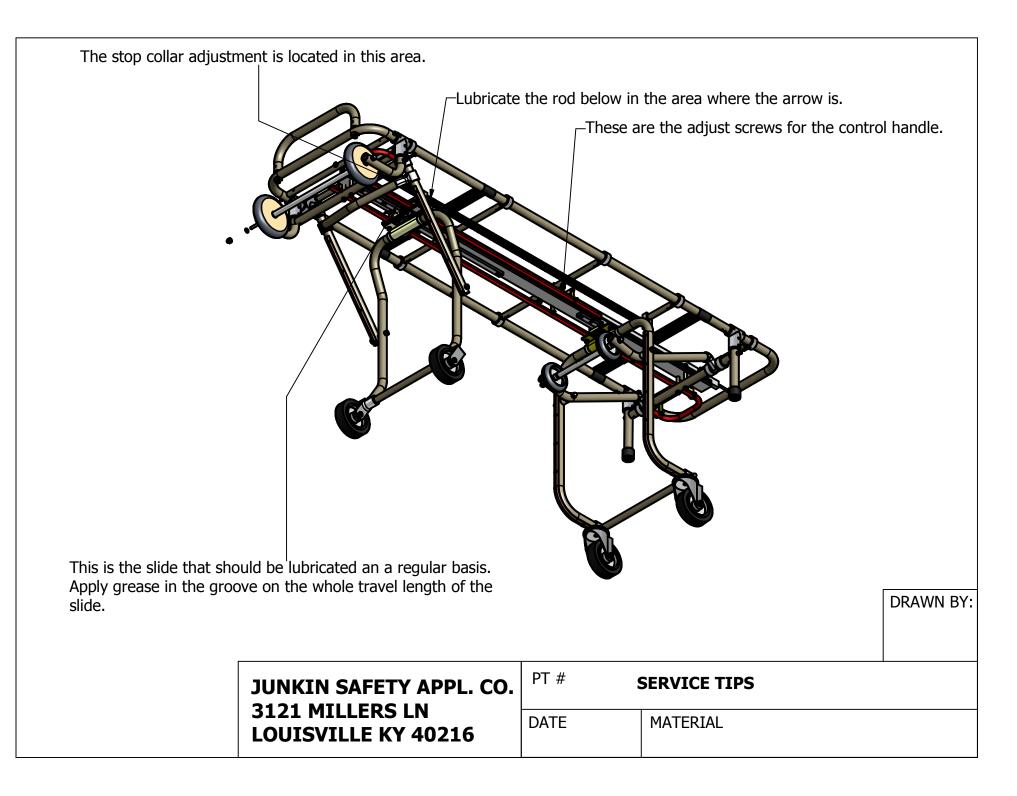

UNLOADING COT DIRECTIONS TO AVOID A "DROP"

1. WHEN UNLOADING THE COT, AS THE SECOND SET OF LEGS COMES OUT OF THE VEHICLE AND SWINGS DOWN AND LOCKS INTO POSITION FOLLOW THE DIAGRAM BELOW TO MAKE SURE THE LEGS ARE LOCKED INTO THE HOME POSITION BEFORE ROLLING THE COT AWAY FROM VEHICLE.

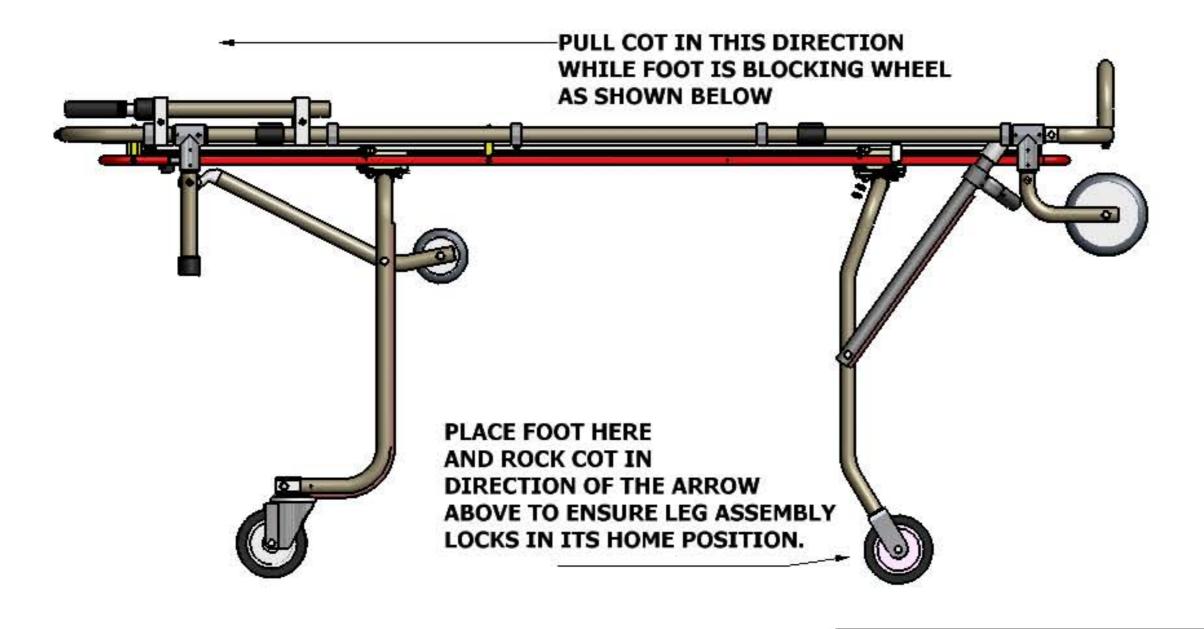

OPERATING INSTRUCTIONS: LIFT THIS END FIRST!!!!!


When a single operator is raising the cot, he/she must raise the non-loading end first. This is the end with the posts.

After it has been raised to its desired height, the operator can then lift the Loading end.

If this procedure is not followed, it could result in a drop.

W.Chris Mercke President

MC-100 SPRING ADJUSTMENT INSTRUCTIONS

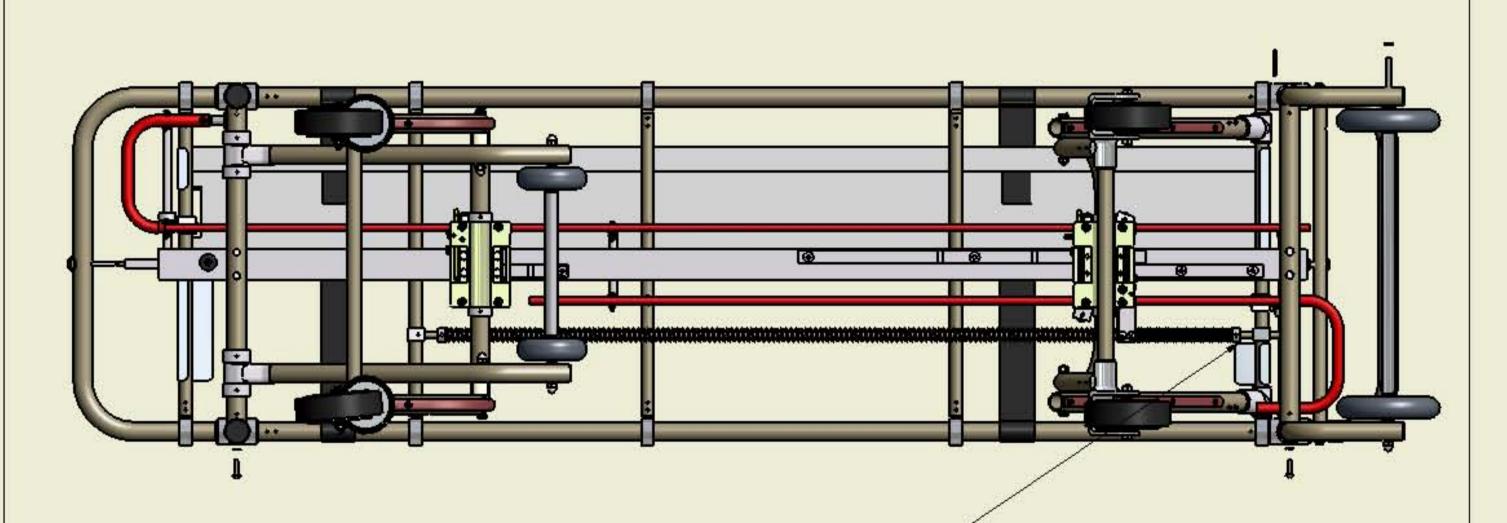

Adjust the shaft collar for desired results. Compressing the spring make it harder to load the cot (fold the legs), but at the same time when unloading the cot the legs "snap" into position much easier. If the cot is difficult to load then you would want to move the shaft collar to the right to soften the tension on the spring.

These changes sometimes need to be made depending on the configuration of your vehicle.

DRAWN BY:

JUNKIN SAFETY APPL. CO. 3121 MILLERS LN LOUISVILLE KY 40216

PT#

DATE

MATERIAL

IMPORTANT NOTICE

All pivot points and moving parts are to be lubricated on a regular basis. Failure to do so will result in poor performance of the cot. It is suggested that a light to medium weight oil be used on all pivot points and a Teflon grease be used on the slide mechanism.


NOTE-The best way to lubricate all points of the cot is to lay the cot upside-down on a table so you Can see the slides, control handle hangers, etc.


Points of Lubrication

- 1. The red control handle hangers. These are the parts that connect the red control handle to the main frame of the cot,. There are 6 points one one control handle and 8 points on the other handle.
- 2. The pivot points on the legs where the leg supports connects to the leg themselves.
- 3. The slide mechanism.-This is the most important part to keep lubricated. Using a "Teflon" grease, apply a coat of grease to anywhere on the main rail that the slide comes in contact with. This is recommended to be performed after every washing or as per needed.

CONTROL HANDLE ADJUSTMENT PROCEDURE

In order to maintain proper operation of your cot it may become necessary to make adjustments periodically. the clearance between the control lever and the white nylon roller on the slide lever should be at a maximum of 1/16"

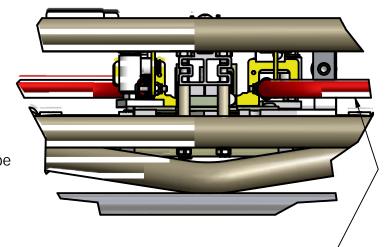

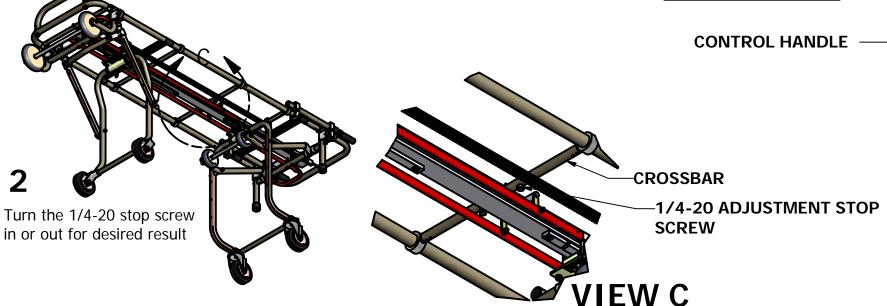

WRONG-

Note view 1- There is too much space between the lever and the slide.

CORRECT-THE LEVER ALMOST
TOUCHES THE SLIDE
VIEW 2